

---

## CONTACT OXIDATION

Faulty Tachometer:?

One of the complaints we hear is the tachometer us behaving erratically. “Some times it jumps up in RPM for no apparent reason. Tapping on the glass brings it back to the correct RPM. At some other point this problem appears again.”

If this problem sounds familiar, try this:

Locate the selector switch on the rear of the tachometer. Note the position of the arrow on the screw driver slot. Rotate the switch about 6 times and stop at the original position. Does that resolve the problem when observing over the next several boating trips?

Depending on the environment, sometimes a thin film of matter or oxidation developes between the switch contact and the circuit. This film tends to insolate the connection ever so slightly. Rotating the switch several times cleans the surface giving renewed life to the tachometer.

